




# Thule Transformation Kit for Thule SmartClamp System Ducato <2017





## > Instructions

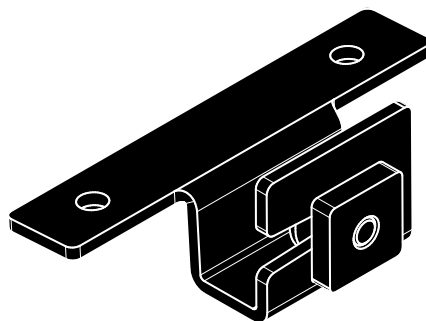

**301646**

ADR909-00 | 3380045300  
20/03/2017

Bring your life  
thule.com

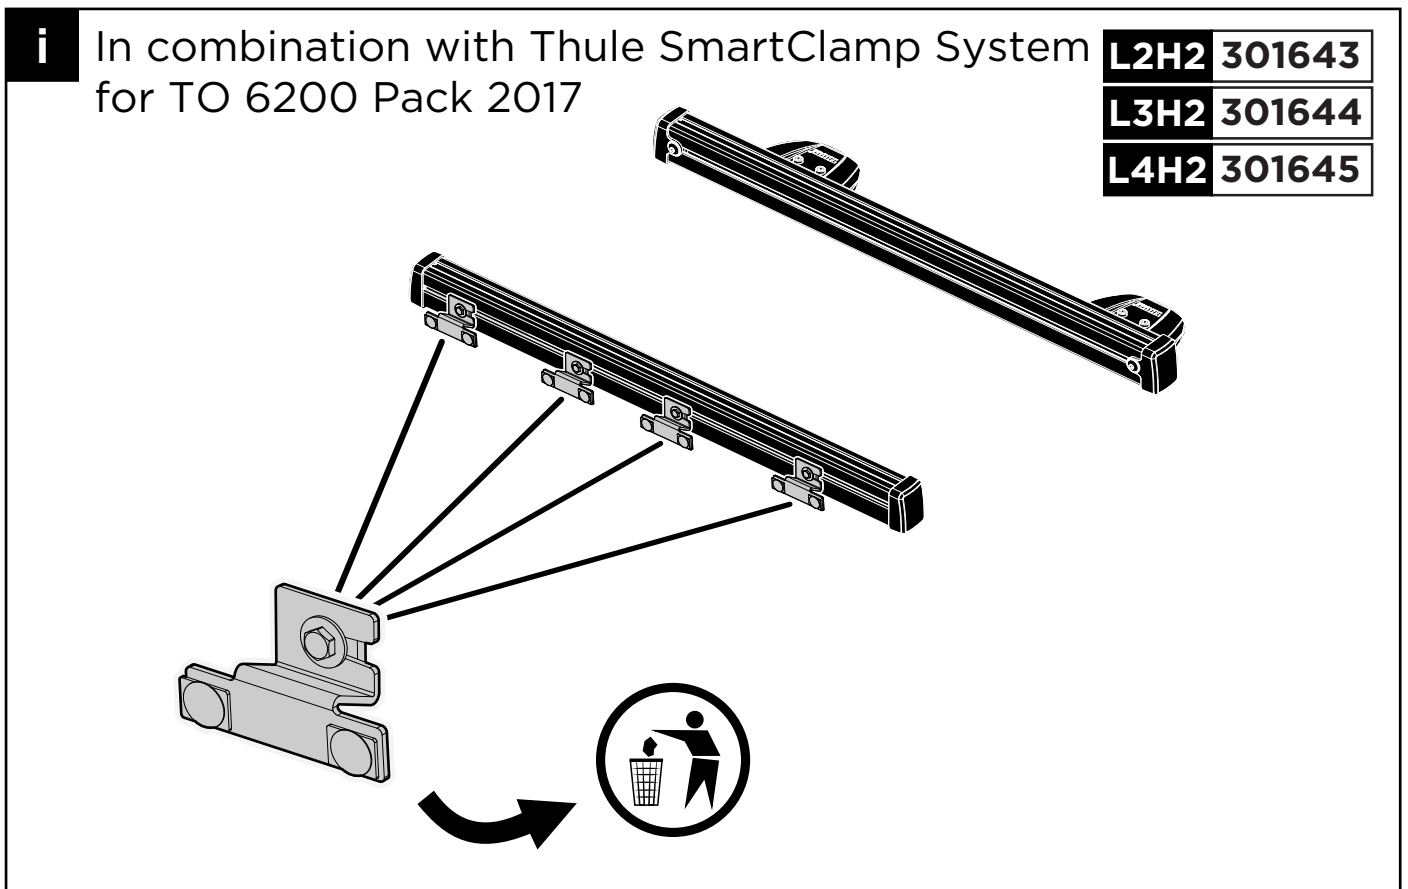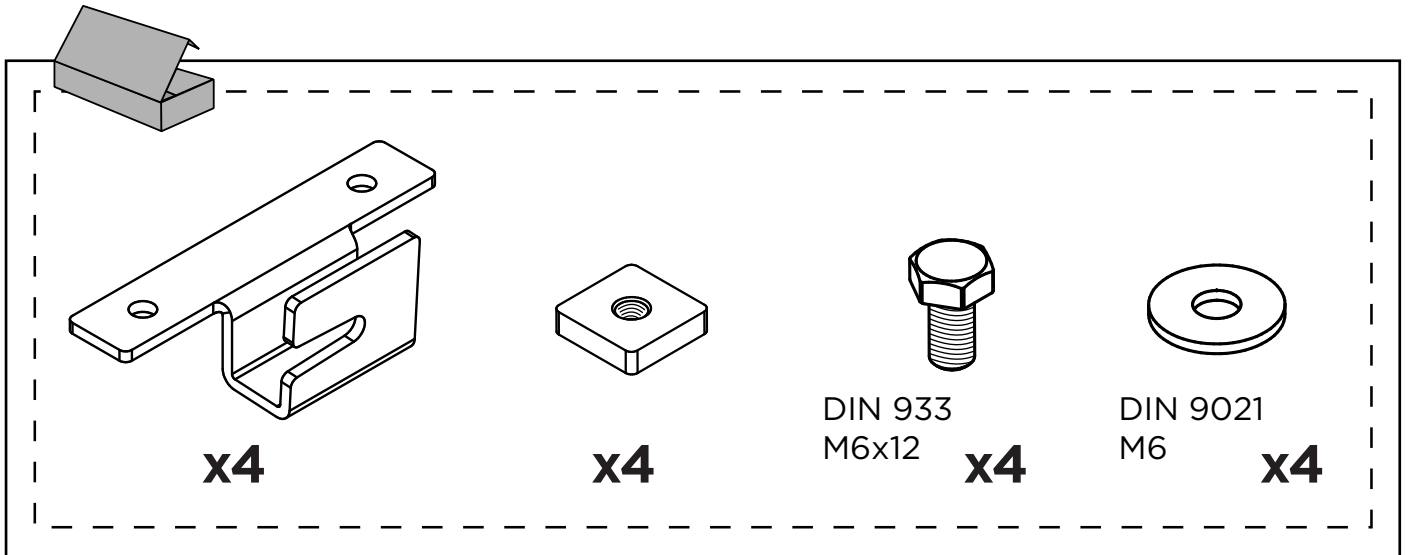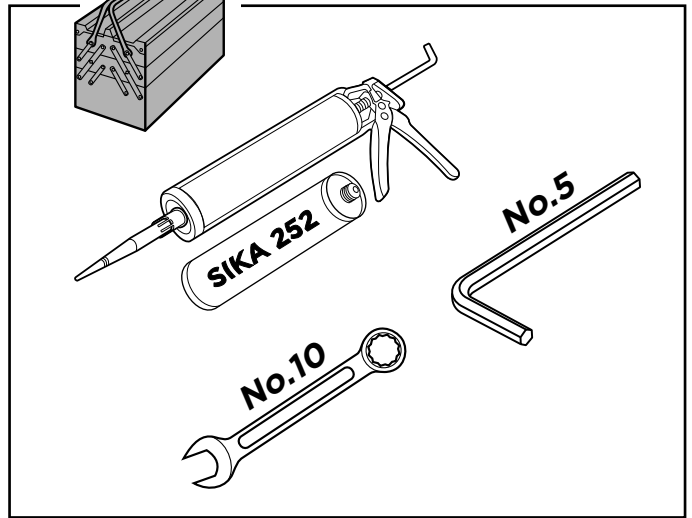
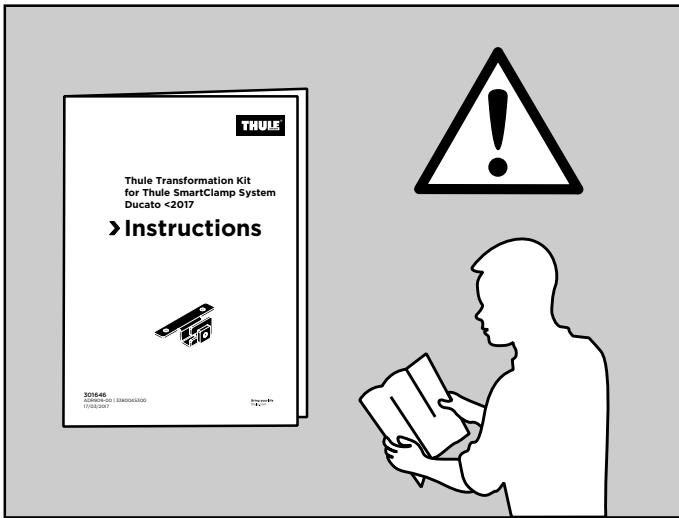


i


> 1 2




3

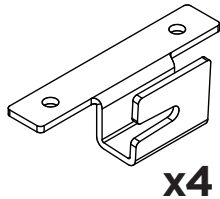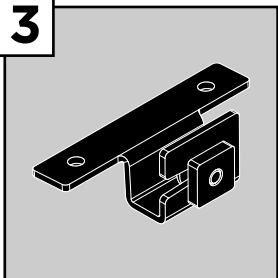


A

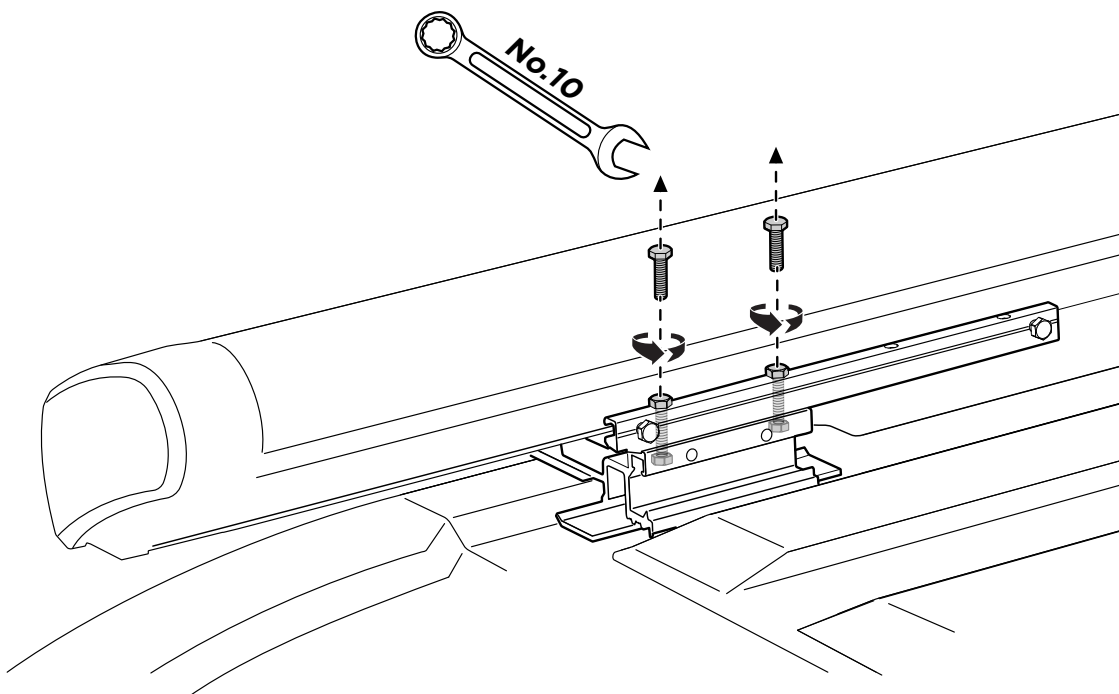


B

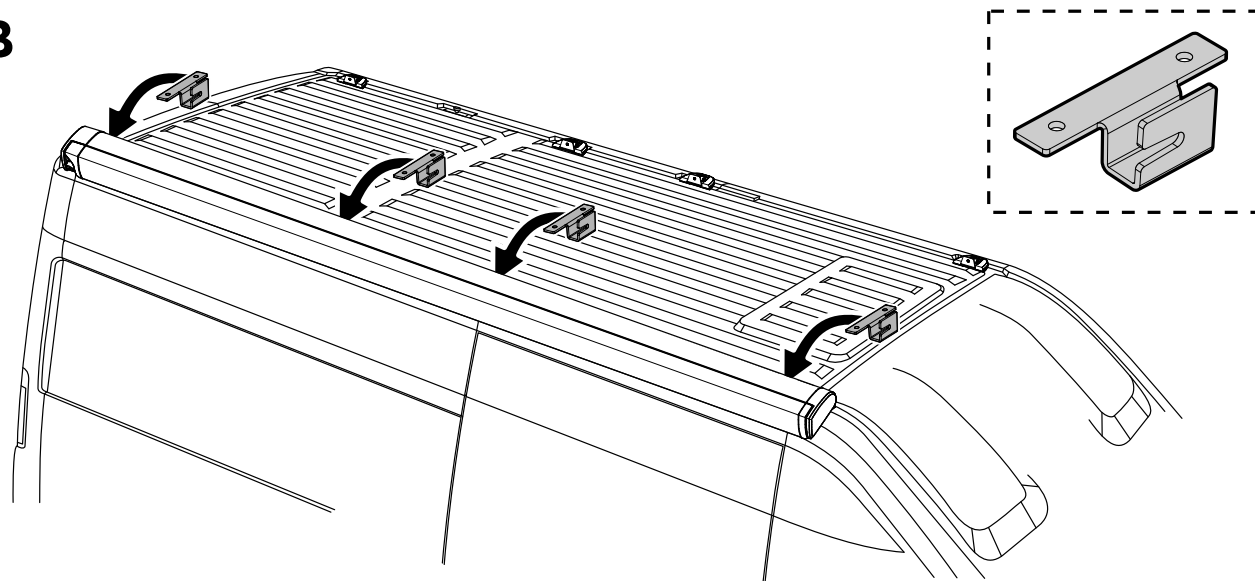

**C**

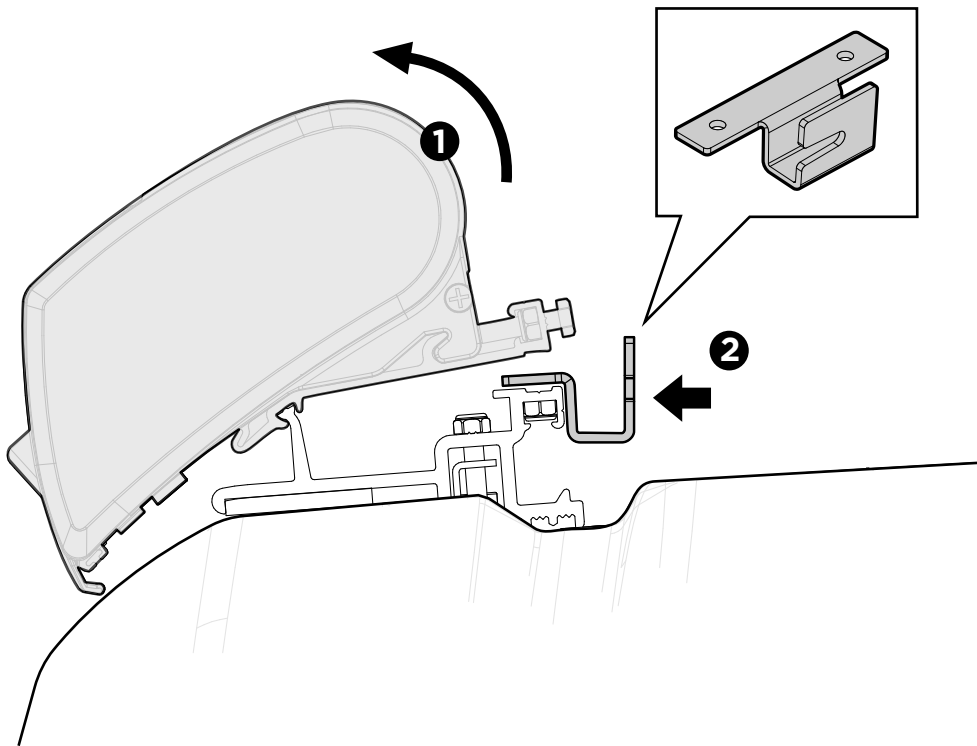


**D**

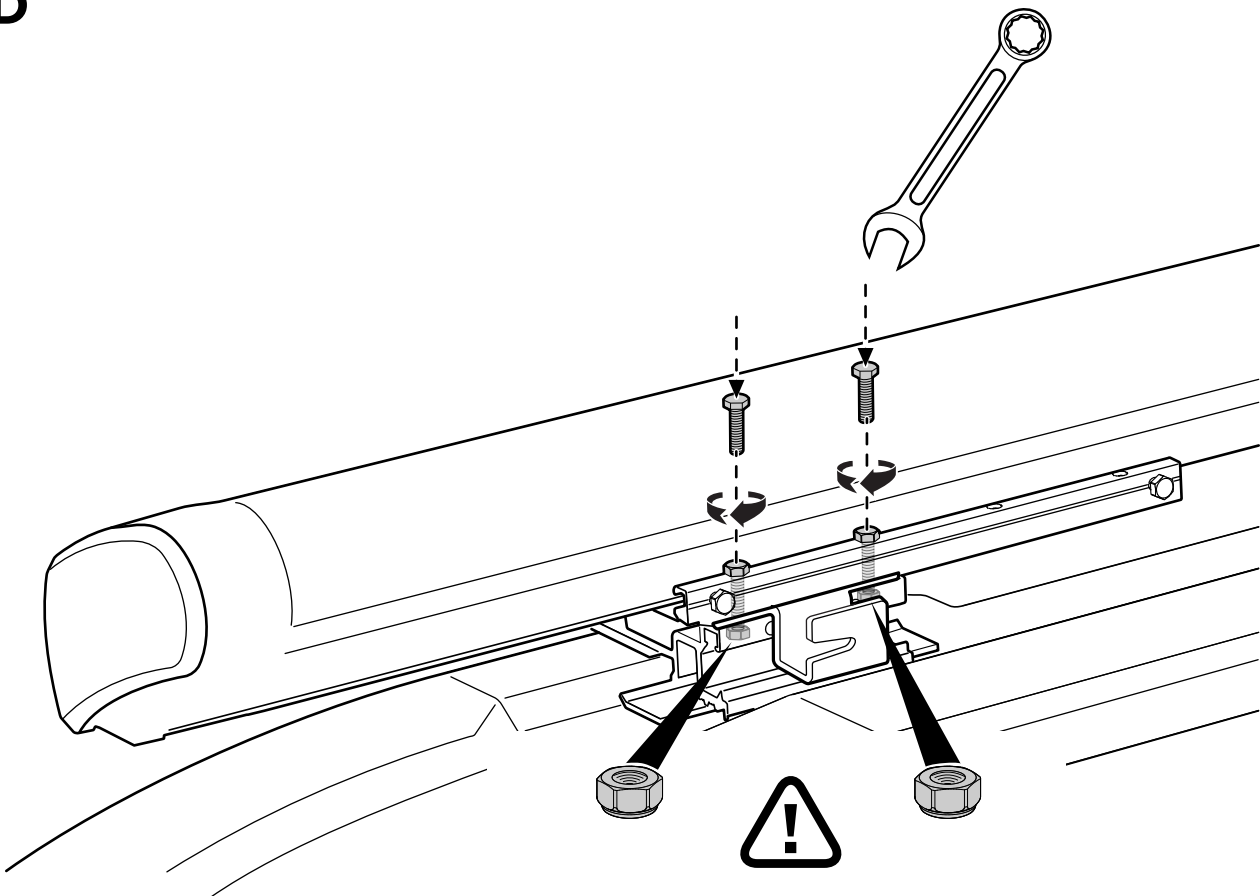



4

A

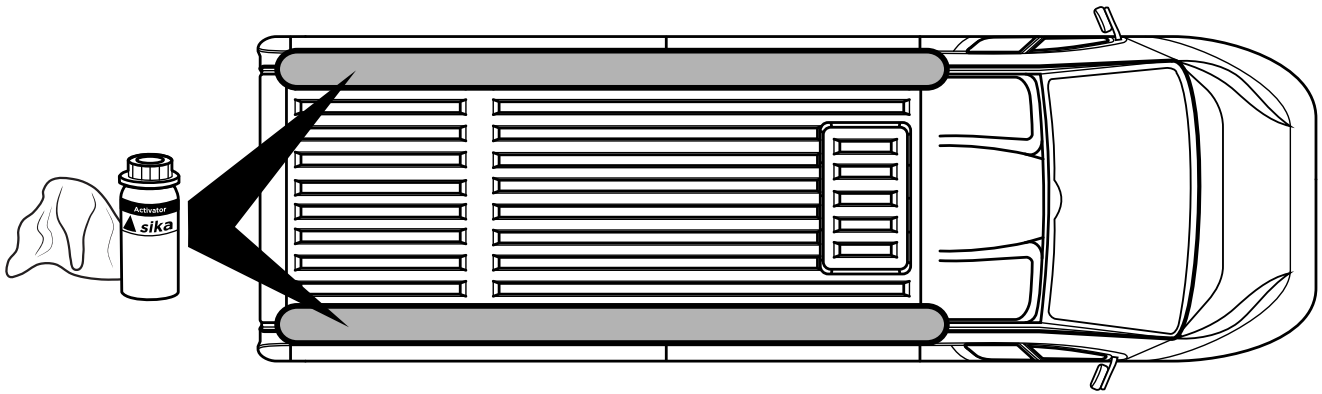


B

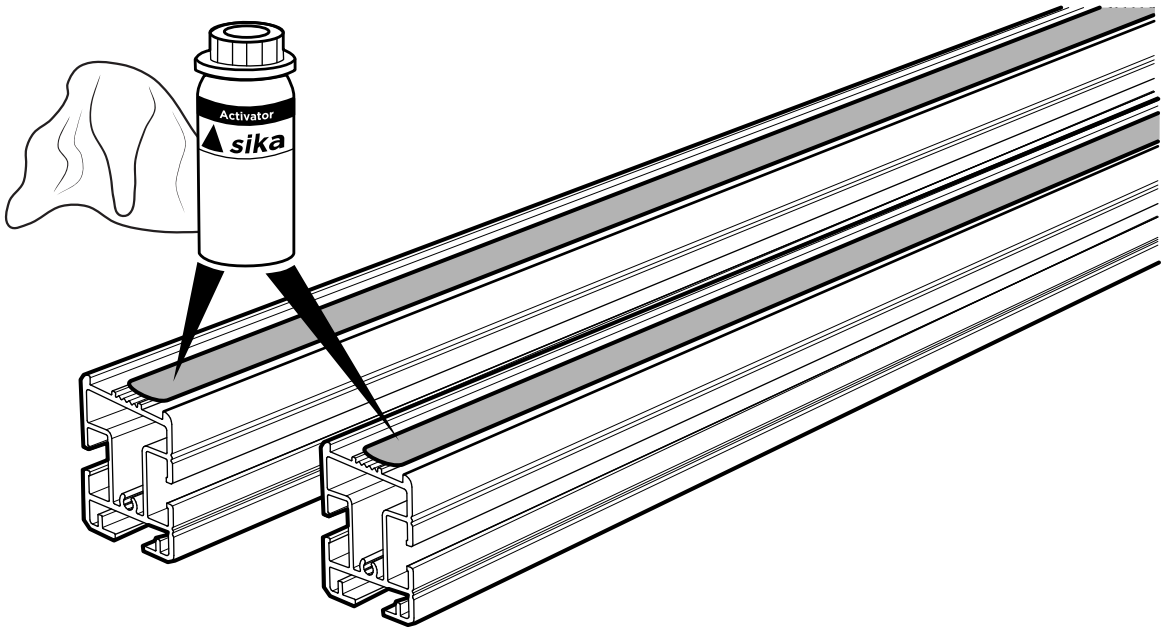


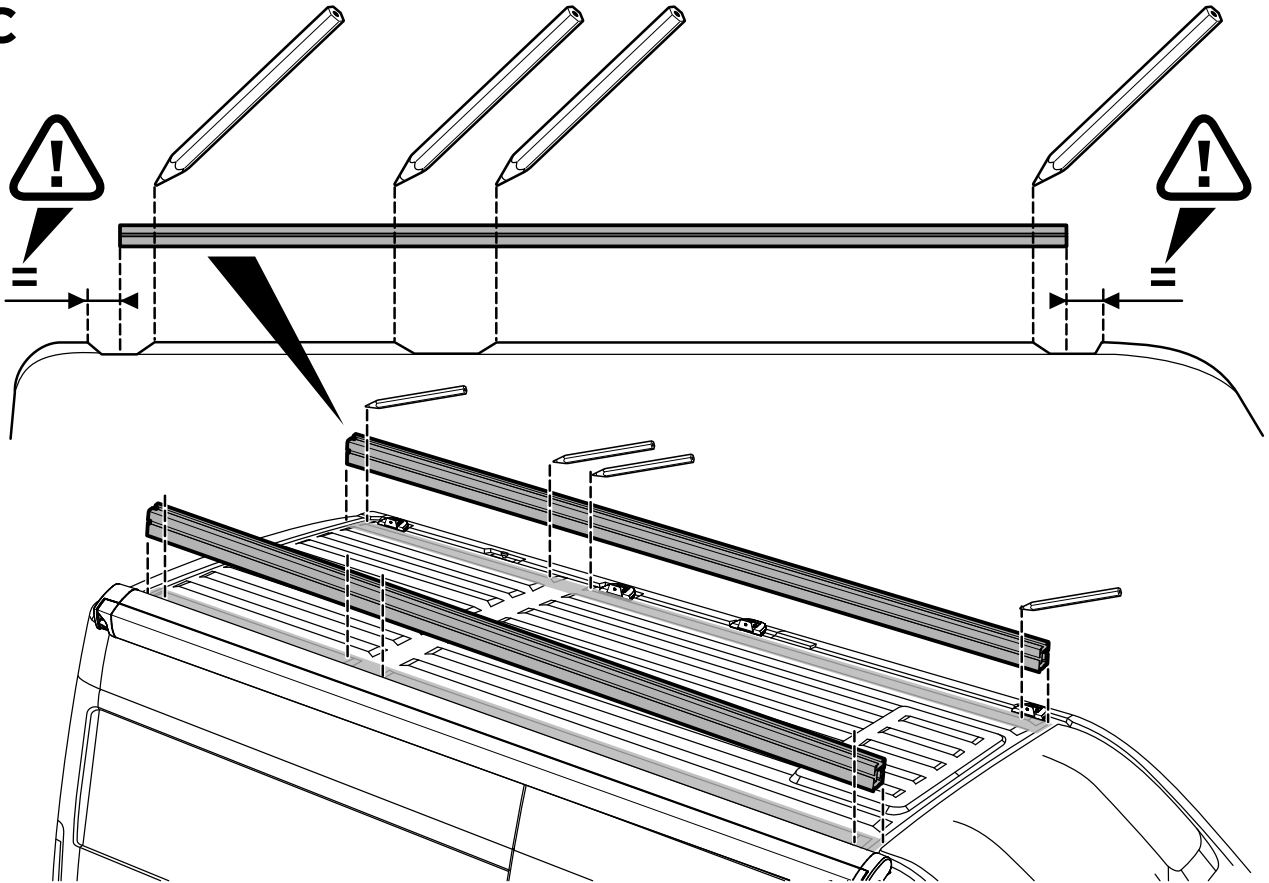**C**

	<p><b>Glue / Lijmen / Verklebung / Coller:</b>          Thule recommends / beveelt aan / empfiehlt / recommande:  <b>SIKA 252 or Terostat MS937</b></p> <p>Preparation and sealing according to the prescripts of the glue supplier.          Voorbehandeling en afdichting volgens de voorschriften van de lijmfabrikant.          Primern und Abdichtung nach Anweisung des Dichtmittelherstellers.          Procédure d'installation suivant les prescriptions indiquées sur l'emballage du produit.</p>	<p><b>48 h</b></p>
--	---	--------------------


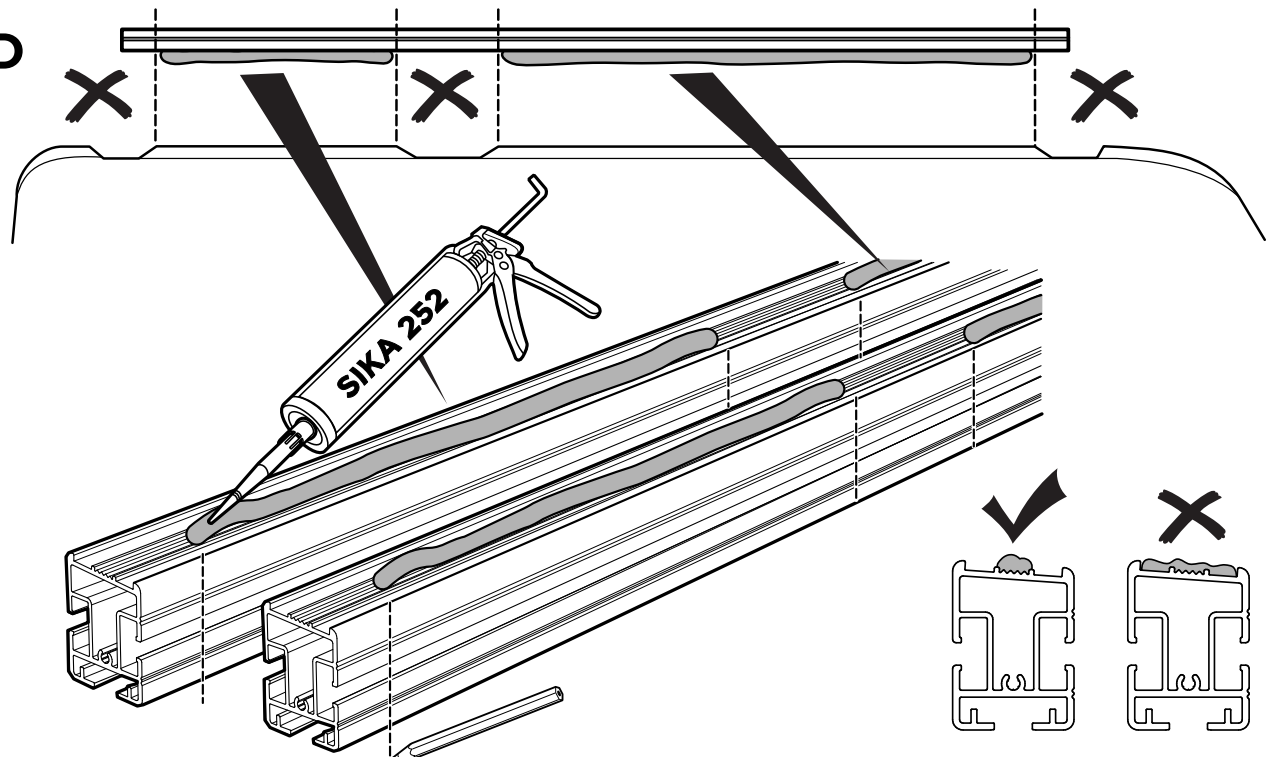
**D**

E

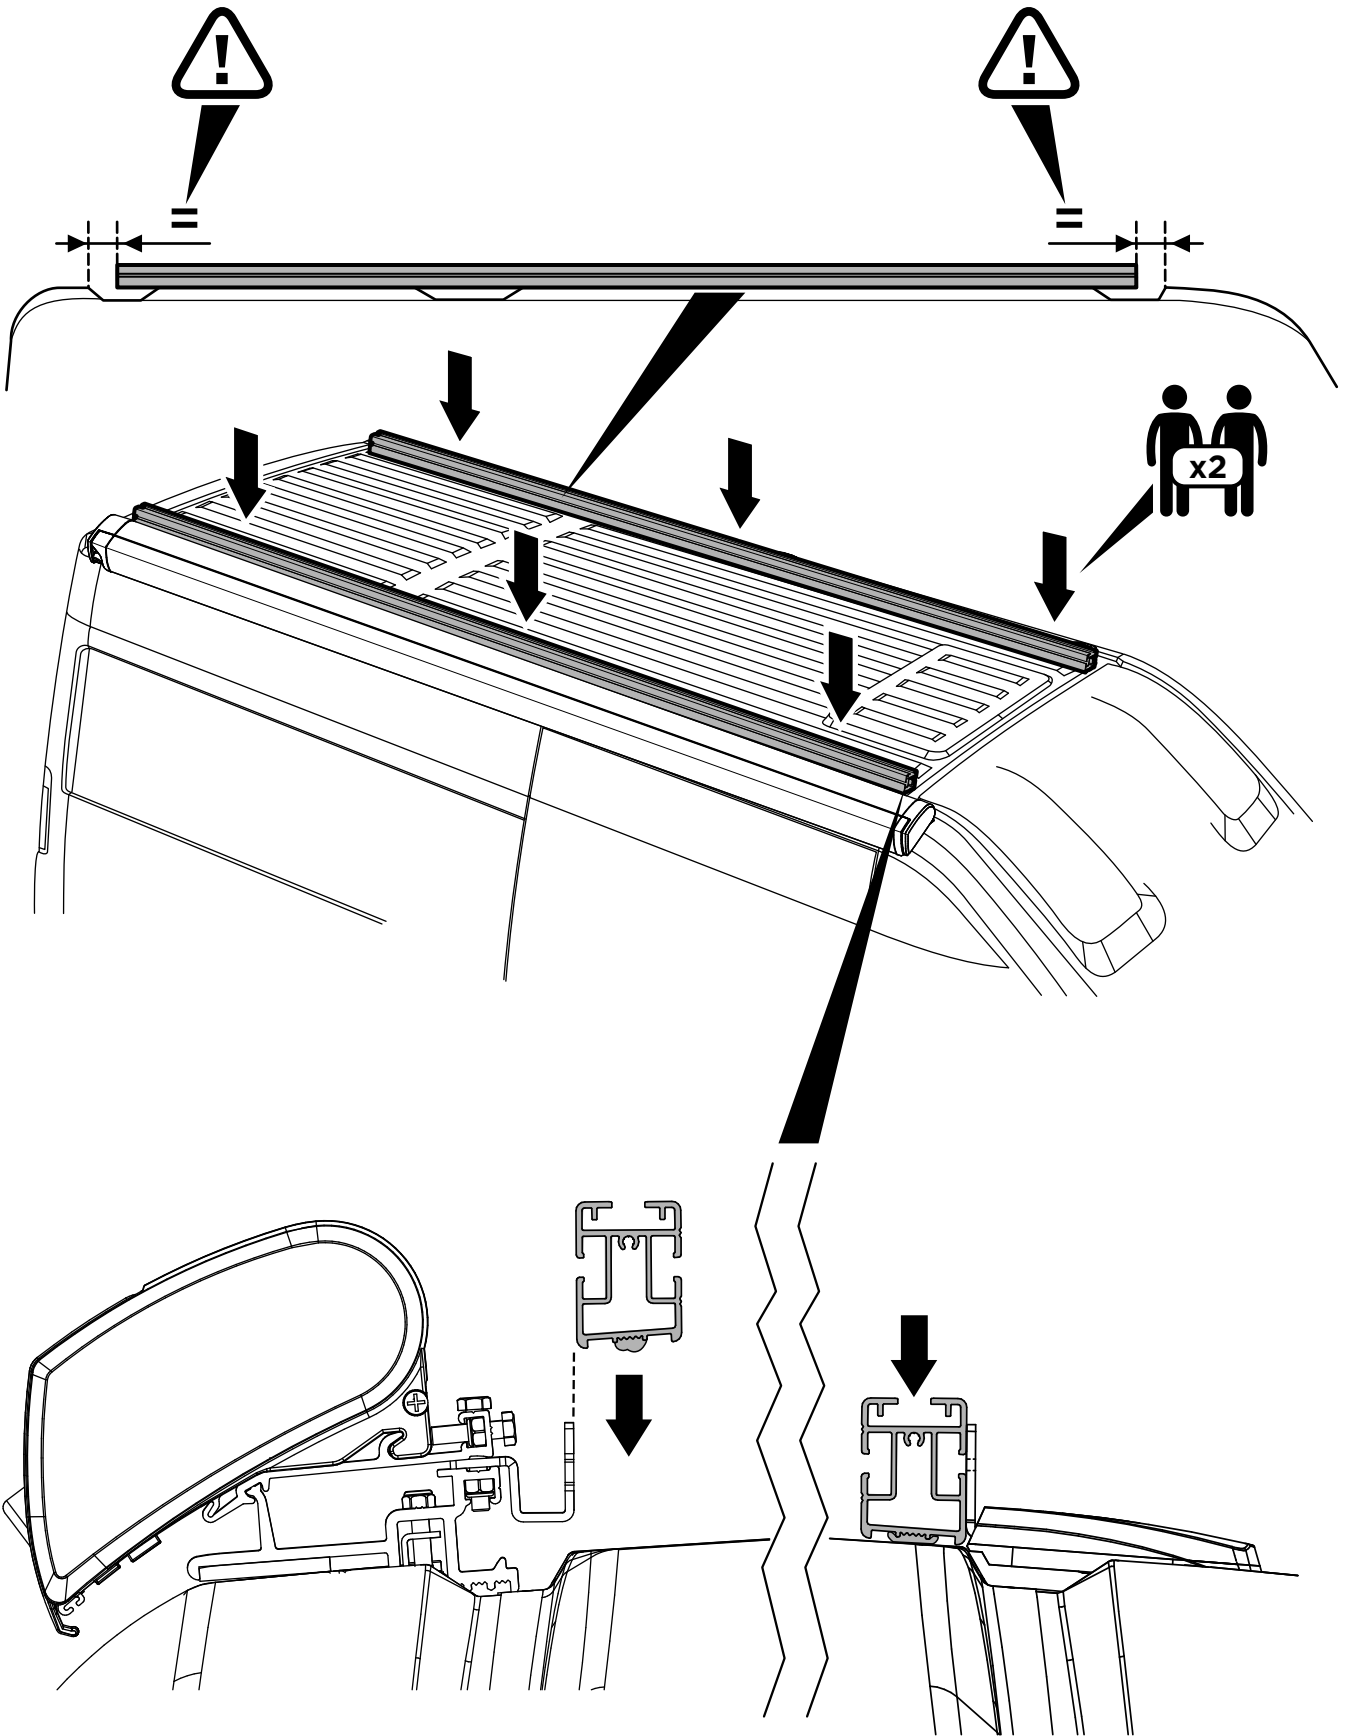


**5**

**A**

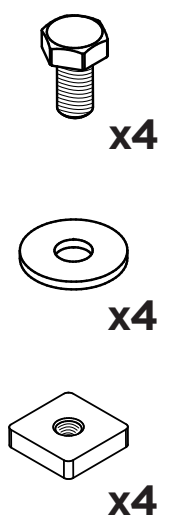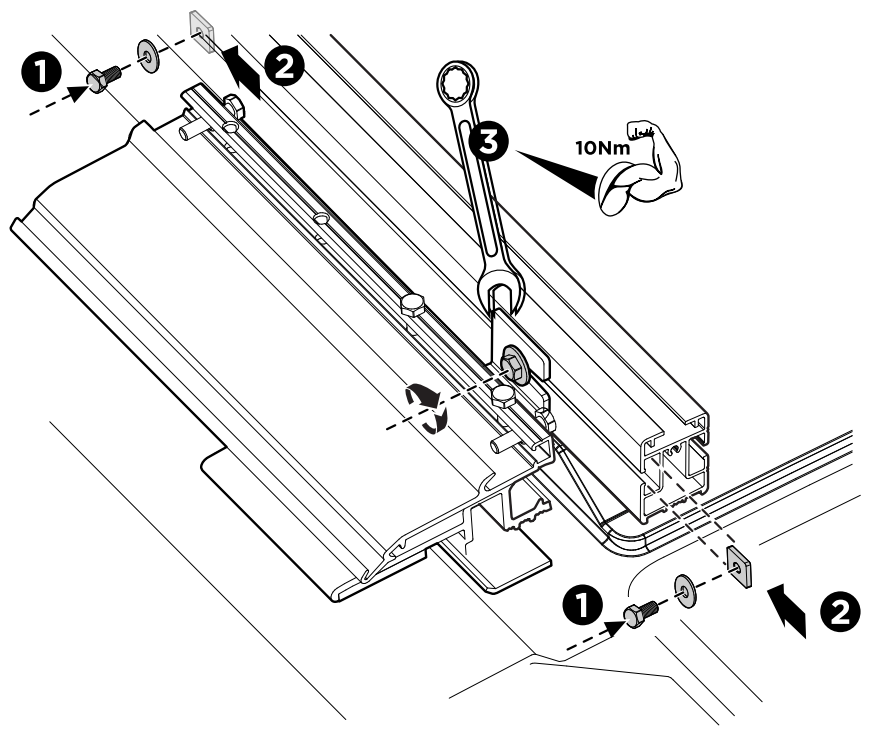

**B**

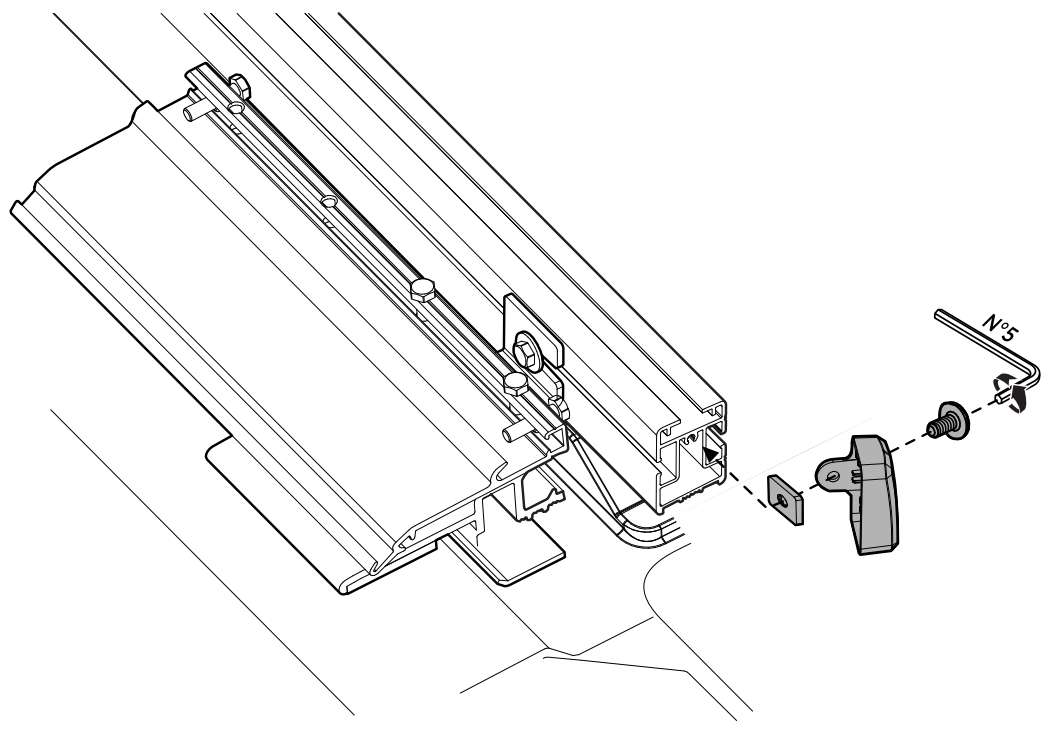

**6**

**6B**

